

DETAIL

CLFast is a foil-backed butyl tape used for fast sealing of metal duct, flexible duct, and duct board. Applicable on low, medium, and high pressure duct work.

FEATURES

- For indoor and outdoor use
- Excellent adhesion in cold environments
- Peel and stick application for an instant seal
- Excellent flexibility
- Excellent UV resistance
- Mold and mildew resistant
- Available in 2", 3" and 4" widths
- Meets NFPA 90A & 90B
- Meets all SMACNA pressure classes
- Made in the USA



TECHNICAL

- Aluminum Foil Thickness: 2 mils
- Butyl Thickness: 15 mils
- Total Thickness: 17 mils
- Color: Foil - Aluminum, Butyl - Gray
- Base: Butyl Rubber
- Peel Strength: 13-15 PLI (ASTM D3330, Method B)
- UL 723 Listed
- Tested to 15" water gauge
- Meets ASTM E84
- ASTM G21 (Fungal Resistance) - No growth
- Bond Time: Immediate
- Tensile Strength: > 1,000 psi (ASTM D412)
- Application Temperature: Above 40°F
- Service Temperature: -0°F to 190°F
- Storage Temperature: 35°F to 110°F
- Flexibility: Cold Temperature Passes (ASTM C765)
- Solids Content: 100%
- VOC: 0g/liter
- Flammability: Non-flammable
- Shelf Life: 2 years

PACKAGING

ITEM CODE	ITEM DESCRIPTION	PACKAGING	WEIGHT
CLFAST2100	CLFAST Foil Backed Butyl Tape, 2" x 100 ft	24 rolls/case	54 lbs/case
CLFAST3100	CLFAST Foil Backed Butyl Tape, 3" x 100 ft	16 rolls/case	54 lbs/case
CLFAST4100	CLFAST Foil Backed Butyl Tape, 4" x 100 ft	12 rolls/case	54 lbs/case
CLFAST6100	CLFAST Foil Backed Butyl Tape, 6" x 100 ft	8 rolls/case	54 lbs/case

Proud members of the following organizations:



CLFast Installation Instructions



DETAIL


CLFast is a foil-backed butyl tape used for fast sealing of metal duct, flexible duct, and duct board. Applicable on low, medium, and high pressure duct work.

CONTACT


1100 Ashwood Drive
Suite 1102
Canonsburg, PA 15317
888.973.7600
www.clward.com
info@clward.com

INSTALLATION - RECTANGULAR DUCT

1. Cut two pieces of CLFast for the top and bottom of the duct. Be sure to cut the CLFast the width of the duct plus 4 inches to give a 2" overlap at the corners of the duct.
2. Make sure the duct surface is free from dirt, dust, debris, and oil to ensure the CLFast has a clean surface to adhere to.
3. For the top and bottom of the duct, start to remove the release liner from the tape. Working from one side of the duct (with your 2" overlap at the corner), apply the CLFast centered on the joint, to the other side of the duct, finishing with the other 2" overlap.
4. Using the CL WARD squeegee, squeegee over the CLFast ensuring the tape is applied firmly to the duct.
5. Now cut two pieces for the sides of the duct. Be sure to cut the CLFast the height of the duct plus 4 inches to give a 2" overlap at the corners of the duct.
6. For the sides of the duct, start to remove the release liner from the tape. Working from the top of the duct (with your 2" overlap at the corner), apply the CLFast centered on the joint, to the bottom of the duct, finishing with the other 2" overlap.
7. Using the CL WARD squeegee, squeegee over the CLFast ensuring the tape is applied firmly to the duct.

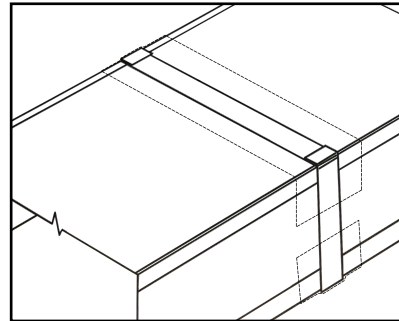


Top and Bottom with 2" overlap

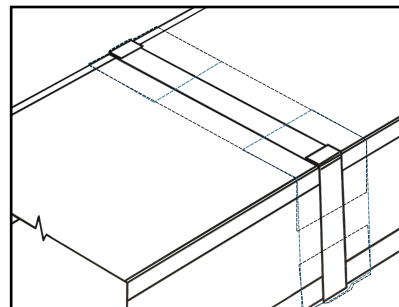

Sides with 2" overlap

INSTALLATION - ROUND DUCT

1. Cut the piece of CLFast the circumference of the duct plus 4 inches to give a good overlap.
2. Make sure the duct surface is free from dirt, dust, debris, and oil to ensure the CLFast has a clean surface to adhere to.
3. Start to remove the release liner and apply CLFast making sure the tape is centered over the seam of the duct.
4. After the CLFast has been applied to the circumference of the duct, use the CLWARD squeegee to squeegee over the CLFast ensuring the tape is applied firmly to the duct.

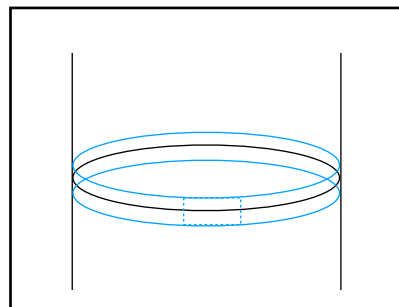

Circumference with 4" overlap

Proud members of the following organizations:

